<u>DeviceMaster EIP | DeviceMaster UP - EtherNet/IP Versions and PortVision DX</u>

Use the following table to determine which version of PortVision DX you should use to manage your DeviceMaster Gateway depending on the EtherNet/IP firmware version.

DeviceMaster EIP DeviceMaster UP		Firmware Versions	
Part Number	Model	Use PortVision v3.05	Use PortVision v4.09 or higher
99601-9	DeviceMaster EIP-2101 (1P DB9, DIN Rail)	Not supported	EtherNet/IP v6.02 or higher with Bootloader v4.00 or higher
99620-0	DeviceMaster EIP-2201 (1P, Screw Terminal, DIN Rail)		
99441-1	DeviceMaster UP 1P DB9 Panel	EtherNet/IP firmware up to v4.11 with Bootloader up to v3.xx	
99531-9	DeviceMaster EIP-2202† (2P, 1E, Screw Term, DIN Rail)		
99551-7	DeviceMaster EIP-2102† (2P, 1E, DB9)		
99541-8	DeviceMaster EIP-2402† (2P, 2E, Screw Terminal, DIN Rail)		
99561-6	DeviceMaster EIP-2302† (2P, 2E, DB9, DIN Rail)		
99611-8	DeviceMaster EIP-2304 (4P, 2E, DIN Rail)	Not supported	
99447-3	DeviceMaster UP 4P Panel	EtherNet/IP firmware	
		up to v4.11 with	
		Bootloader up to v3.xx	
† The following products have been renamed to align with the new DIN naming convention:			
DeviceMaster UP 2-Port 1E renamed DeviceMaster EIP-2202			
DeviceMaster UP 2-Port DB9 1E renamed DeviceMaster EIP-2102			
DeviceMaster UP 2-Port 2E renamed DeviceMaster EIP-2402			
DeviceMaster UP 2-Port DB9 2E renamed DeviceMaster EIP-2302			