


RocketPort Jet 2-Port RJ45 Jumper Settings

If using an 8-Pin RJ45 cable or connector, set the **P2** jumper on the RocketPort Jet 2-port .

P2 Jumper



*If you are using an 8-Pin RJ45 cable/connector, use the **P2 Jumper** to determine which signal appears on pin 2 of the 10-Pin jack and thus Pin 1 of the 8-Pin plug. (See the illustration below)

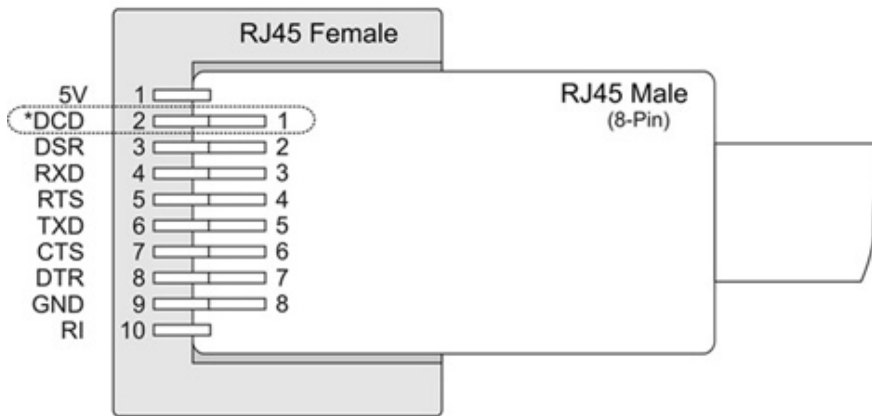

10/08/19

Copyright © 2019 Pepperl+Fuchs Control, Inc.