

RocketPort Jet 2- Port Ring Indicator Jumper Settings

Set the RocketPort Jet 2-port **P1** jumper, if you want to receive the ring indicator (RI) signal on Pin 9.

P1 Pin9



*Use the **P1 Pin9** Jumper to determine which signal appears on pin 9 of the DB9M connector.
(See the illustration below)

