

RocketPort Jet 4-Port Ring Indicator Jumper Settings

Set the RocketPort Jet 4-port jumper, if you want to receive the ring indicator (RI) signal on Pin 9.



*Use the jumper block to determine which signal appears on pin 9 of the DB9M connector for each port.

