

# RocketPort Jet Driver Installation: Windows Vista and Windows Server 2008

Make sure that you have done the following:

- Unpackaged the driver files
- If necessary, set the DIP switches.
- Installed the RocketPort Jet in the PC.

Use the following procedure to install the device driver.

1. If you have not done so, power on the PC.

Plug and play will detect a new hardware and start the **New Hardware Wizard**.

2. Click **Show Me Other Options** when asked to install the disc.
3. Click **Browse My Computer for Driver Software (Advanced)** and browse to the location where you unpackaged the driver files.
4. Click **Next**.

Windows will install the driver.

5. Click **Finish**.



#### Note

The RocketPort Jet 2-port installs four ports by default.

6. Go to the Device Manager.

- a. Click **Start**, right-click **Computer**.
- b. Click **Manage**.
- c. Click **Diagnostics** and then double-click **Device Manager**.
- d. Expand the **Multi-port serial adapters** entry, right-click the RocketPort Jet you want to configure, and then click **Properties**.

7. Click **Ports (COM & LPT)**.

8. Click **Enhanced Communications Port X (COMxx)**.

9. Click **Properties** and then **Data Rate**.

10. Check the **Input Clock Frequency**. The clock frequency should be 14.7456 MHz.

If it is not, select **14.7456** or **Autodetect Clock Frequency**.

11. Click **OK**.