

RocketPort Jet Driver Installation: Windows 7

Make sure that you have done the following:

- Unpackaged the driver files
- If necessary, set the DIP switches.
- Installed the RocketPort Jet in the PC.

Use the following procedure to install the device driver.

1. If you have not done so, power on the PC.

Windows 7 will display a list of devices for which Windows 7 could not find device drivers and a serial bus adapter will be listed.

2. Go to the **Device Manager**.
 - a. Right-click **My Computer** or **Computer**, click **Manage**, and then highlight **Device Manager**.
 - b. Expand the **Multi-port serial adapters** entry, right-click the RocketPort Jet you want to configure, and then click **Properties**.
3. Click **Multi-port Serial Adapters**.
4. Click **Serial Bus Adapter**.
5. Right-click on the RocketPort Jet and click **Update Driver Software**.
6. Click **Browse My Computer for Driver Software**.
7. Browse to the location you unzipped the driver files.
8. Click **Next**.
9. Click **Finish**.

Windows 7 will install the driver.



Note

The RocketPort Jet 2-port installs four ports by default.

10. Go to the **Device Manager**.
11. Click **Ports (COM & LPT)**.
12. Click **Enhanced Communications Port X (COMxx)**.
13. Click **Properties** and then **Data Rate**.
14. Check the **Input Clock Frequency**. The clock frequency should be 14.7456 MHz.

If it is not, select **14.7456** or **Autodetect Clock Frequency**.
15. Click **OK**.